


# For your safety

# Instruction manual

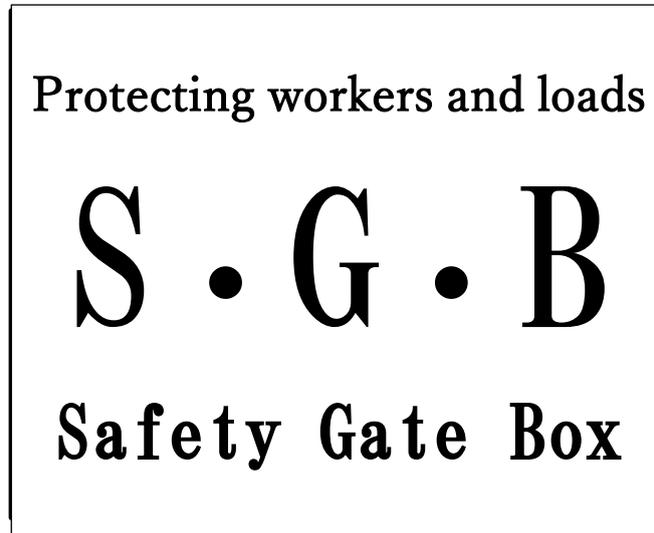

Contents	page
1. Safety precautions . . . . .	2
2. Names of parts . . . . .	3
3. Precautions before installation . . . . .	4
4. How to use . . . . .	4
5. Maintenance . . . . .	5
6. Call us . . . . .	5


This instruction manual contains safety procedure to protect your operators and products.  
These must be observed for safe operation.

Marks	Description
 Warning	Instruction that, if ignored, could result in death or serious injury caused by incorrect operation of the equipment.
 Prohibited	Instruction, if ignored, could result in personal injury or products' damage caused by incorrect operation of the equipment.


# 1 . Safety precaution

-  Warning    The rack has an open-close door for avoiding falling. It is not possible to avoid falling and shifting of your load perfectly.
  
-  Prohibited    Do not repair, modify, and disassemble the gate and arms.  
Unbalance at the balance weight can result in injury and major accidents.
  
-  Warning    It's the law, you must be trained and certified. Crash and collision with the rack can cause of breakdowns and serious accidents.
  
-  Prohibited    Do not exceed the load capacity and the dimension. Oversized and overweighted load can cause breakdowns of the rack and damaged the load.
  
-  Prohibited    Do not climb and get into the rack. The movement of the gate can cause serious accidents.
  
-  Prohibited    Do not come closer to the rack, when a forklift works. the movement of the gate can cause serious accidents.
  
-  Prohibited    Do not take the load by hand. Unexpected movement of the gate can kill you and injure.

## 2. Names of parts

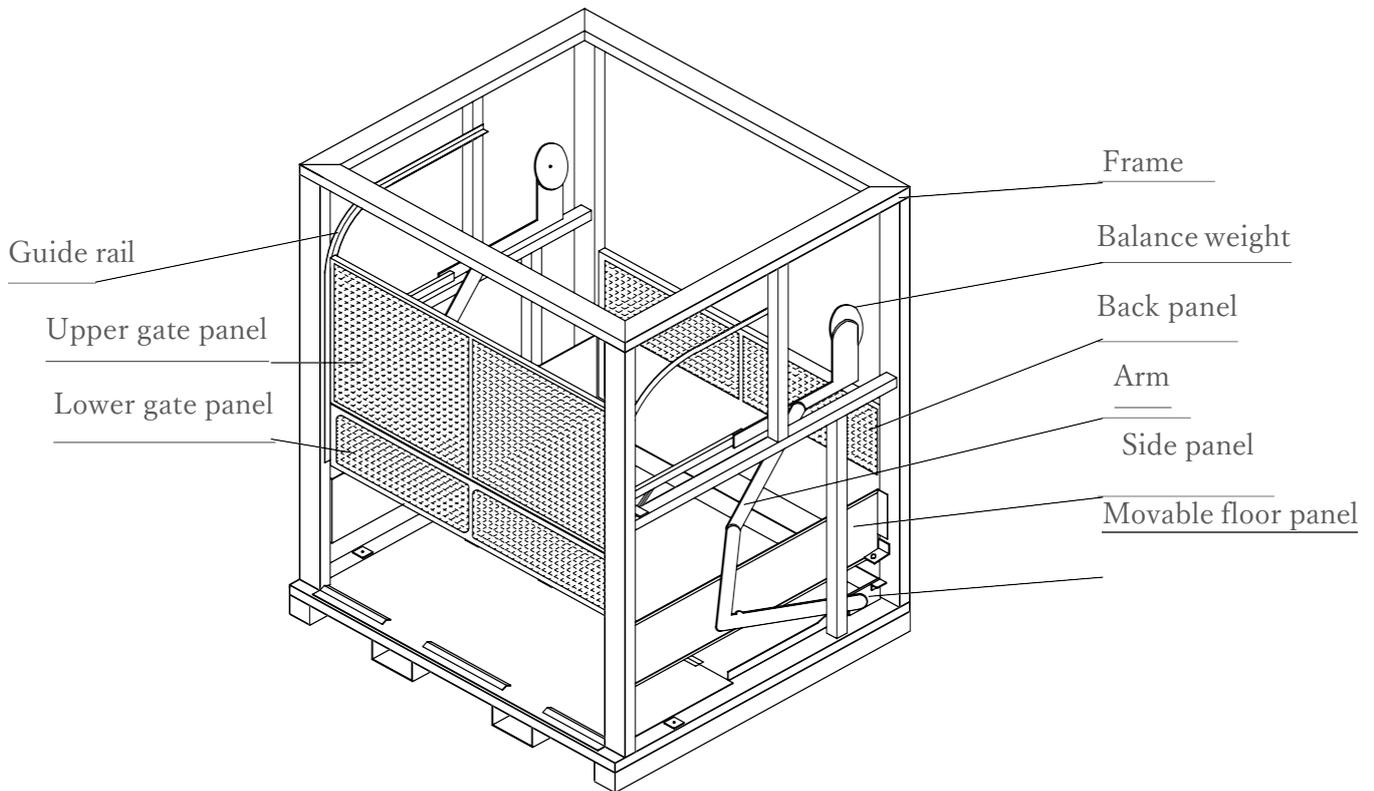

### Limit dimension and load capacity

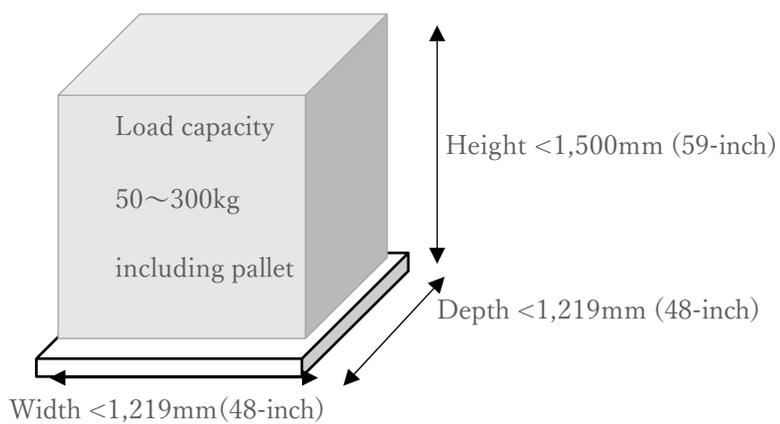

### 3 . Precautions before installation

- ⚠ This rack is designed for indoor use only. Conditions similar to outdoor, such as temperature, humidity including the environment exposed to the weather can result in incidence of rust and cause poor performance of the rack.

### 4 . How to use

#### 【Loading】

- ( 1 ) Put your products on a suitable size of pallet within the specified size and load.
  - ⊘ Do not exceed the capacity and the dimensional limit. You could be killed or injured seriously, if you use inadequately.
- ( 2 ) Reconfirm the weight and the size of the load before putting in, especially the height.
- ( 3 ) Insert the load horizontally without touching the slanted movable floor panel. Touching the floor panel have the gate closed and the products may be damaged by the gate.
- ( 4 ) Set the load slowly on the floor panel to make sure the gate are closed, then take the fork out.

#### 【Unloading】

- ( 1 ) Insert the fork in the pallet on the rack.
  - ⚠ Caution Be careful of not touching the fork to the frame and the floor panel. It might be a cause of breakdowns and damages.
- ( 2 ) Lift up the fork more than 10 cm(4 inches).
  - ⚠ Caution Lifting up too much may cause a collision of the rising gate and the load.
- ( 3 ) Make sure the gate get up and open completely.
  - ⚠ Caution The load will collide with the gate, if you take the load out before the gate open completely.

## 5 . Maintenance

For your safety and comfortable use, periodical maintenance should be required.

## 6. Call us;

- In the case that the gate does not close when putting the load on the floor panel.  
There are some possibilities that the arm and the movable floor panel was disconnected, or movable portion is rusty.
- In the case that the gate does not open when lifting the load up.  
There are some possibilities that the spring is disconnected or over-stretched due to no use for long period of time. The spring needs to be fixed or replaced.
- In the case that strange noises occur when the gate opens and closes.  
There are some possibilities that the connecting part is rusted.

Sales Agent

Date of purchase

PL 保険（生産物賠償責任保険）加入済